

# **OsmoPCAP VTY Reference**



**osmo-pcap-server**

Copyright © 2025

This work is copyright by sysmocom - s.f.m.c. GmbH. All rights reserved.

---

**COLLABORATORS**

	<i>TITLE :</i> OsmoPCAP VTY Reference		
<i>ACTION</i>	<i>NAME</i>	<i>DATE</i>	<i>SIGNATURE</i>
WRITTEN BY		February 13, 2025	

**REVISION HISTORY**

NUMBER	DATE	DESCRIPTION	NAME
0.6.0	2025-Jan-10	Automatically Generated VTY Reference	s.f.m.c.

# Contents

<b>1</b>	<b>VTY reference</b>	<b>1</b>
1.1	Common Commands	1
1.1.1	end	2
1.1.2	exit	2
1.1.3	help	2
1.1.4	list [with-flags]	2
1.1.5	show running-config	3
1.1.6	show vty-attributes	3
1.1.7	show vty-attributes (application library global)	3
1.1.8	write	4
1.1.9	write file [PATH]	4
1.1.10	write memory	4
1.1.11	write terminal	5
1.2	view	5
1.2.1	enable [expert-mode]	5
1.2.2	logging color (0 1)	5
1.2.3	logging disable	6
1.2.4	logging enable	6
1.2.5	logging filter all (0 1)	6
1.2.6	logging level (pcap client server vty tls global lapd linp lmux lmi lmi lmsl...	7
1.2.7	logging level force-all (debug info notice error fatal)	9
1.2.8	logging level set-all (debug info notice error fatal)	10
1.2.9	logging print category (0 1)	10
1.2.10	logging print category-hex (0 1)	11
1.2.11	logging print extended-timestamp (0 1)	11
1.2.12	logging print file (0 1 basename) [last]	12
1.2.13	logging print level (0 1)	12
1.2.14	logging print thread-id (0 1)	13
1.2.15	logging set-log-mask MASK	13
1.2.16	logging timestamp (0 1)	14

1.2.17	logp (pcapclientserver vty ts l global lapd linp mux mill mb l ms l ctrl l gt...	14
1.2.18	no logging level force-all	16
1.2.19	show alarms	17
1.2.20	show asciidoc counters	17
1.2.21	show history	17
1.2.22	show logging vty	18
1.2.23	show online-help	18
1.2.24	show pid	18
1.2.25	show rate-counters [skip-zero]	19
1.2.26	show stats [skip-zero]	19
1.2.27	show stats level (global peer subscriber) [skip-zero]	19
1.2.28	show talloc-context (application global all) (full brief DEPTH)	20
1.2.29	show talloc-context (application global all) (full brief DEPTH) filter REGEXP	21
1.2.30	show talloc-context (application global all) (full brief DEPTH) tree ADDRESS	21
1.2.31	show uptime	22
1.2.32	show version	22
1.2.33	terminal length <0-512>	23
1.2.34	terminal no length	23
1.2.35	who	23
1.3	enable	24
1.3.1	configure [terminal]	24
1.3.2	copy running-config startup-config	24
1.3.3	disable	24
1.3.4	logging color (0 1)	25
1.3.5	logging disable	25
1.3.6	logging enable	25
1.3.7	logging filter all (0 1)	26
1.3.8	logging level (pcapclientserver vty ts l global lapd linp mux mill mb l ms l ctrl l gt...	26
1.3.9	logging level force-all (debug info notice error fatal)	29
1.3.10	logging level set-all (debug info notice error fatal)	29
1.3.11	logging print category (0 1)	30
1.3.12	logging print category-hex (0 1)	30
1.3.13	logging print extended-timestamp (0 1)	31
1.3.14	logging print file (0 1 basename) [last]	31
1.3.15	logging print level (0 1)	32
1.3.16	logging print thread-id (0 1)	32
1.3.17	logging set-log-mask MASK	33
1.3.18	logging timestamp (0 1)	33
1.3.19	logp (pcapclientserver vty ts l global lapd linp mux mill mb l ms l ctrl l gt...	34

1.3.20	no logging level force-all	36
1.3.21	show alarms	36
1.3.22	show asciidoc counters	37
1.3.23	show history	37
1.3.24	show logging vty	37
1.3.25	show online-help	38
1.3.26	show rate-counters [skip-zero]	38
1.3.27	show startup-config	38
1.3.28	show stats [skip-zero]	39
1.3.29	show stats level (globalpeerlsubscriber) [skip-zero]	39
1.3.30	show talloc-context (applicationlglobalall) (fulllbrieflDEPTH)	40
1.3.31	show talloc-context (applicationlglobalall) (fulllbrieflDEPTH) filter REGEXP	40
1.3.32	show talloc-context (applicationlglobalall) (fulllbrieflDEPTH) tree ADDRESS	41
1.3.33	show version	42
1.3.34	shutdown	42
1.3.35	stats report	42
1.3.36	stats reset	42
1.3.37	terminal length <0-512>	43
1.3.38	terminal monitor	43
1.3.39	terminal no length	43
1.3.40	terminal no monitor	44
1.3.41	who	44
1.4	config	44
1.4.1	banner motd default	44
1.4.2	banner motd file [FILE]	45
1.4.3	enable password (8l) WORD	45
1.4.4	enable password LINE	46
1.4.5	hostname WORD	46
1.4.6	line vty	46
1.4.7	log alarms <2-32700>	47
1.4.8	log file FILENAME [blocking-io]	47
1.4.9	log gsmtp [HOSTNAME]	47
1.4.10	log stderr [blocking-io]	48
1.4.11	log syslog (authpriv cron daemon ftp lpr mail news user uucp)	48
1.4.12	log syslog local <0-7>	49
1.4.13	log systemd-journal [raw]	49
1.4.14	no banner motd	49
1.4.15	no enable password	50
1.4.16	no hostname [HOSTNAME]	50

---

1.4.17	no log alarms	50
1.4.18	no log file FILENAME	51
1.4.19	no log gsmmap [HOSTNAME]	51
1.4.20	no log stderr	51
1.4.21	no log syslog	52
1.4.22	no log systemd-journal	52
1.4.23	no service advanced-vty	52
1.4.24	no service terminal-length [<0-512>]	53
1.4.25	no stats reporter log [NAME]	53
1.4.26	no stats reporter statsd [NAME]	54
1.4.27	password (8l) WORD	54
1.4.28	password LINE	54
1.4.29	server	55
1.4.30	service advanced-vty	55
1.4.31	service terminal-length <0-512>	55
1.4.32	show history	56
1.4.33	stats interval <0-65535>	56
1.4.34	stats reporter log [NAME]	56
1.4.35	stats reporter statsd [NAME]	57
1.4.36	stats-tcp batch-size <1-65535>	57
1.4.37	stats-tcp interval <0-65535>	57
1.5	config-log	58
1.5.1	logging color (01)	58
1.5.2	logging filter all (01)	58
1.5.3	logging level (pcap client server vt t s l g b a l l p d l n p l m u x l m i l m i b l s m s l ...)	59
1.5.4	logging level force-all (debug info notice error fatal)	61
1.5.5	logging level set-all (debug info notice error fatal)	62
1.5.6	logging print category (01)	62
1.5.7	logging print category-hex (01)	63
1.5.8	logging print extended-timestamp (01)	63
1.5.9	logging print file (01 basename) [last]	64
1.5.10	logging print level (01)	64
1.5.11	logging print thread-id (01)	65
1.5.12	logging timestamp (01)	65
1.5.13	no logging level force-all	66
1.6	config-stats	66
1.6.1	disable	66
1.6.2	enable	66
1.6.3	flush-period <0-65535>	67

1.6.4	level (globalpeersubscriber) . . . . .	67
1.6.5	local-ip ADDR . . . . .	67
1.6.6	mtu <100-65535> . . . . .	68
1.6.7	no local-ip . . . . .	68
1.6.8	no mtu . . . . .	68
1.6.9	no prefix . . . . .	69
1.6.10	prefix PREFIX . . . . .	69
1.6.11	remote-ip ADDR . . . . .	69
1.6.12	remote-port <1-65535> . . . . .	70
1.7	config-line . . . . .	70
1.7.1	bind A.B.C.D [<0-65535>] . . . . .	70
1.7.2	login . . . . .	70
1.7.3	no login . . . . .	71
1.8	server . . . . .	71
1.8.1	base-path PATH . . . . .	71
1.8.2	client NAME A.B.C.D [(store no-store)] [tls] . . . . .	71
1.8.3	completed-path PATH . . . . .	72
1.8.4	disable tls . . . . .	72
1.8.5	enable tls . . . . .	72
1.8.6	file-permission-mask MODE . . . . .	73
1.8.7	max-file-size NR . . . . .	73
1.8.8	max-snaplen <1-262144> . . . . .	73
1.8.9	no client NAME . . . . .	74
1.8.10	no completed-path . . . . .	74
1.8.11	no max-file-size . . . . .	74
1.8.12	no rotate-localtime . . . . .	75
1.8.13	no tls allow-auth anonymous . . . . .	75
1.8.14	no tls allow-auth x509 . . . . .	75
1.8.15	no tls capath . . . . .	76
1.8.16	no tls crlfile . . . . .	76
1.8.17	no tls priority . . . . .	76
1.8.18	no tls server-cert . . . . .	77
1.8.19	no tls server-key . . . . .	77
1.8.20	no zeromq-publisher . . . . .	77
1.8.21	rotate-localtime (second minute hour day month year) . . . . .	78
1.8.22	rotate-localtime (second minute hour day month year) mod <1-4294967295> . . . . .	78
1.8.23	server ip A.B.C.D . . . . .	79
1.8.24	server port <1-65535> . . . . .	79
1.8.25	tls allow-auth anonymous . . . . .	80

---



---

1.8.26	tls allow-auth x509 . . . . .	80
1.8.27	tls capath .PATH . . . . .	80
1.8.28	tls crlfile .PATH . . . . .	81
1.8.29	tls dh generate . . . . .	81
1.8.30	tls dh pkcs .FILE . . . . .	81
1.8.31	tls log-level <0-255> . . . . .	82
1.8.32	tls priority STR . . . . .	82
1.8.33	tls server-cert .PATH . . . . .	82
1.8.34	tls server-key .PATH . . . . .	83
1.8.35	zeromq-publisher (A.B.C.DI*) <1-65535> . . . . .	83

---

# List of Tables

1.1	VTY Parameter Patterns . . . . .	1
1.2	VTY port numbers . . . . .	1

## Chapter 1

# VTY reference

The Virtual Tele Type (VTY) has the concept of nodes and commands. This chapter lists all nodes and the commands that are available within the node. Each command can consist out of several words followed by a variable number of parameters. There are common patterns for the parameters, these include IPv4 addresses, number ranges, a word, a line of text and choice. The following will explain the commonly used patterns.

Pattern	Example	Explanation
A.B.C.D	127.0.0.1	A IPv4 address
TEXT	example01	A single string without any spaces, tabs
.TEXT	Some information	A line of text
(OptionA OptionB OptionC)	OptionA	A choice between a list of available options
<0-10>	5	A number from a range

Table 1.1: VTY Parameter Patterns

The application is configured through the VTY. For configuring a system one needs to enter the **enable** node and then enter the **configure terminal** command. Then the configuration can be made according to the available commands. After the system has been configured one can use the **write** command to write the new configuration to the configuration file. The new file will be used after the application has been restarted.

The following table lists the TCP port numbers of the VTY for the various Osmocom GSM related programs as used on sismocom products:

Port Number	Software
4240	osmo-pcu
4241	osmo-bts
4242	osmo-nitb, osmo-bsc
4243	osmo-bsc_mgcp
4244	osmo-bsc_nat
4245	osmo-sgsn
4246	osmo-gbproxy

Table 1.2: VTY port numbers

### 1.1 Common Commands

These commands are available on all VTY nodes. They are listed here only once, to unclutter the VTY reference.

### 1.1.1 end

#### Command

```
end
```

#### Parameters

end

End current mode and change to enable mode.

### 1.1.2 exit

#### Command

```
exit
```

#### Parameters

exit

Exit current mode and down to previous mode

### 1.1.3 help

#### Command

```
help
```

#### Parameters

help

Description of the interactive help system

### 1.1.4 list [with-flags]

#### Command

```
list [with-flags]
```

#### Parameters

list

Print command list

[with-flags]

Also print the VTY attribute flags

---

### 1.1.5 show running-config

#### Command

```
show running-config
```

#### Parameters

##### show

Show running system information

##### running-config

running configuration

### 1.1.6 show vty-attributes

#### Command

```
show vty-attributes
```

#### Parameters

##### show

Show running system information

##### vty-attributes

List of VTY attributes

### 1.1.7 show vty-attributes (application|library|global)

#### Command

```
show vty-attributes (application|library|global)
```

#### Parameters

##### show

Show running system information

##### vty-attributes

List of VTY attributes

##### application

Application specific attributes only

##### library

Library specific attributes only

##### global

Global attributes only

---

### 1.1.8 write

#### Command

```
write
```

#### Parameters

write

Write running configuration to memory, network, or terminal

### 1.1.9 write file [PATH]

#### Command

```
write file [PATH]
```

#### Parameters

write

Write running configuration to memory, network, or terminal

file

Write to configuration file

[PATH]

Set file path to store the config, or replace if already exists

### 1.1.10 write memory

#### Command

```
write memory
```

#### Parameters

write

Write running configuration to memory, network, or terminal

memory

Write configuration to the file (same as write file)

---

### 1.1.11 write terminal

#### Command

```
write terminal
```

#### Parameters

##### write

Write running configuration to memory, network, or terminal

##### terminal

Write to terminal

## 1.2 view

The view node is the default node when connecting to the VTY interface. This node does not require any additional permission and allows to introspect the application.

### 1.2.1 enable [expert-mode]

#### Command

```
enable [expert-mode]
```

#### Parameters

##### enable

Turn on privileged mode command

##### [expert-mode]

Enable the expert mode (show hidden commands)

### 1.2.2 logging color (0|1)

#### Command

```
logging color (0|1)
```

#### Parameters

##### logging

Configure logging

##### color

Configure color-printing for log messages

##### 0

Don't use color for printing messages

##### 1

Use color for printing messages

---

### 1.2.3 logging disable

#### Command

```
logging disable
```

#### Parameters

##### logging

Configure logging

##### disable

Disables logging to this vty

### 1.2.4 logging enable

This command is required to make logging commands available on the telnet VTY.

#### Command

```
logging enable
```

#### Parameters

##### logging

Configure logging

##### enable

Enables logging to this vty

### 1.2.5 logging filter all (0|1)

Disable/enable general log output on a given target. Typically, 'logging filter all 1' allows to see the usual log output on a given target. Setting to '0' can be useful when logging to the telnet VTY console: mute all log output to allow typing VTY commands on the telnet prompt without interference from log output; 'logging filter all 1' then re-enables logging in the same log output configuration as before. Some applications provide more specific filters, e.g. to log a given IMSI only. To employ such filters, set 'logging filter all 0' to disable general logging, and then enable a more specific filter instead.

#### Command

```
logging filter all (0|1)
```

#### Parameters

##### logging

Configure logging

##### filter

Filter log messages

---



all

Do you want to log all messages?

0

Only print messages matched by other filters

1

Bypass filter and print all messages

## 1.2.6 logging level (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|...

Command

```
logging level (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctrl| ←
lgtp|lstats|lgsup|loap|lss7|lsccp|lsua|lm3ua|lmgcp|ljibuf|lrspro|lns|lbssgp|lnsdata ←
|lnssignal|liuup|lpfcp|lcsn1|lio) (debug|info|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

pcap

PCAP related functionality

client

Client related functionality

server

Server related functionality

vty

VTY code

tls

TLS code

lglobal

Library-internal global log family

llapd

LAPD in libosmogsm

linp

A-bis Input Subsystem

lmux

A-bis B-Subchannel TRAU Frame Multiplex

lmi

A-bis Input Driver for Signalling

---

lmib  
A-bis Input Driver for B-Channels (voice)

lsms  
Layer3 Short Message Service (SMS)

lctrl  
Control Interface

lgtp  
GPRS GTP library

lstats  
Statistics messages and logging

lgsup  
Generic Subscriber Update Protocol

loap  
Osmocom Authentication Protocol

lss7  
libosmo-sigtran Signalling System 7

lscpp  
libosmo-sigtran SCCP Implementation

lsua  
libosmo-sigtran SCCP User Adaptation

lm3ua  
libosmo-sigtran MTP3 User Adaptation

lmgcp  
libosmo-mgcp Media Gateway Control Protocol

ljibuf  
libosmo-netif Jitter Buffer

lrspro  
Remote SIM protocol

lns  
GPRS NS layer

lbssgp  
GPRS BSSGP layer

lnsdata  
GPRS NS layer data PDU

lnsignal  
GPRS NS layer signal PDU

liuup  
Iu UP layer

---

lpfcp	libosmo-pfcp Packet Forwarding Control Protocol
lcsn1	libosmo-csn1 Concrete Syntax Notation 1 codec
lio	libosmocore IO Subsystem
debug	Log debug messages and higher levels
info	Log informational messages and higher levels
notice	Log noticeable messages and higher levels
error	Log error messages and higher levels
fatal	Log only fatal messages

### 1.2.7 logging level force-all (debug|info|notice|error|fatal)

#### Command

```
logging level force-all (debug|info|notice|error|fatal)
```

#### Parameters

##### logging

Configure logging

##### level

Set the log level for a specified category

##### force-all

Globally force all logging categories to a specific level. This is released by the 'no logging level force-all' command. Note: any 'logging level <category> <level>' commands will have no visible effect after this, until the forced level is released.

##### debug

Log debug messages and higher levels

##### info

Log informational messages and higher levels

##### notice

Log noticeable messages and higher levels

##### error

Log error messages and higher levels

##### fatal

Log only fatal messages

## 1.2.8 logging level set-all (debug|info|notice|error|fatal)

### Command

```
logging level set-all (debug|info|notice|error|fatal)
```

### Parameters

#### logging

Configure logging

#### level

Set the log level for a specified category

#### set-all

Once-off set all categories to the given log level. There is no single command to take back these changes -- each category is set to the given level, period.

#### debug

Log debug messages and higher levels

#### info

Log informational messages and higher levels

#### notice

Log noticeable messages and higher levels

#### error

Log error messages and higher levels

#### fatal

Log only fatal messages

## 1.2.9 logging print category (0|1)

### Command

```
logging print category (0|1)
```

### Parameters

#### logging

Configure logging

#### print

Log output settings

#### category

Configure log message

#### 0

Don't prefix each log message

#### 1

Prefix each log message with category/subsystem name

---

### 1.2.10 logging print category-hex (0|1)

#### Command

```
logging print category-hex (0|1)
```

#### Parameters

##### logging

Configure logging

##### print

Log output settings

##### category-hex

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem nr in hex ('<000b>')

### 1.2.11 logging print extended-timestamp (0|1)

#### Command

```
logging print extended-timestamp (0|1)
```

#### Parameters

##### logging

Configure logging

##### print

Log output settings

##### extended-timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp with YYYYMMDDhhmmssnnn

---

### 1.2.12 logging print file (0|1|basename) [last]

#### Command

```
logging print file (0|1|basename) [last]
```

#### Parameters

##### logging

Configure logging

##### print

Log output settings

##### file

Configure log message

##### 0

Don't prefix each log message

##### 1

Prefix each log message with the source file and line

##### basename

Prefix each log message with the source file's basename (strip leading paths) and line

##### [last]

Log source file info at the end of a log line. If omitted, log source file info just before the log text.

### 1.2.13 logging print level (0|1)

#### Command

```
logging print level (0|1)
```

#### Parameters

##### logging

Configure logging

##### print

Log output settings

##### level

Configure log message

##### 0

Don't prefix each log message

##### 1

Prefix each log message with the log level name

### 1.2.14 logging print thread-id (0|1)

#### Command

```
logging print thread-id (0|1)
```

#### Parameters

##### logging

Configure logging

##### print

Log output settings

##### thread-id

Configure log message logging Thread ID

0

Don't prefix each log message

1

Prefix each log message with current Thread ID

### 1.2.15 logging set-log-mask MASK

#### Command

```
logging set-log-mask MASK
```

#### Parameters

##### logging

Configure logging

##### set-log-mask

Set the logmask of this logging target

##### MASK

List of logging categories to log, e.g. 'abc:mno:xyz'. Available log categories depend on the specific application, refer to the 'logging level' command. Optionally add individual log levels like 'abc,1:mno,3:xyz,5', where the level numbers are LOGL\_DEBUG=1 LOGL\_INFO=3 LOGL\_NOTICE=5 LOGL\_ERROR=7 LOGL\_FATAL=8

## 1.2.16 logging timestamp (0|1)

### Command

```
logging timestamp (0|1)
```

### Parameters

#### logging

Configure logging

#### timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp

## 1.2.17 logp (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctrl|lgt...)

### Command

```
logp (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctrl|lgtp| ↵
      lstats|lgsup|loap|lss7|lscpp|lsua|lm3ua|lmgcp|ljibuf|lrspro|lns|lbssgp|lndata| ↵
      lnssignal|liuup|lpfcp|lcsn1|lio) (debug|info|notice|error|fatal) .LOGMESSAGE
```

### Parameters

#### logp

Print a message on all log outputs; useful for placing markers in test logs

#### pcap

PCAP related functionality

#### client

Client related functionality

#### server

Server related functionality

#### vty

VTY code

#### tls

TLS code

#### lglobal

Library-internal global log family



---

llapd  
LAPD in libosmogsm

linp  
A-bis Input Subsystem

lmux  
A-bis B-Subchannel TRAU Frame Multiplex

lmi  
A-bis Input Driver for Signalling

lmib  
A-bis Input Driver for B-Channels (voice)

lsms  
Layer3 Short Message Service (SMS)

lctrl  
Control Interface

lgtp  
GPRS GTP library

lstats  
Statistics messages and logging

lgsup  
Generic Subscriber Update Protocol

loap  
Osmocom Authentication Protocol

lss7  
libosmo-sigtran Signalling System 7

lsccp  
libosmo-sigtran SCCP Implementation

lsua  
libosmo-sigtran SCCP User Adaptation

lm3ua  
libosmo-sigtran MTP3 User Adaptation

lmgcp  
libosmo-mgcp Media Gateway Control Protocol

ljibuf  
libosmo-netif Jitter Buffer

lrspro  
Remote SIM protocol

lns  
GPRS NS layer

---

lbssgp  
GPRS BSSGP layer

lndata  
GPRS NS layer data PDU

lnsignal  
GPRS NS layer signal PDU

liuup  
Iu UP layer

lpfcp  
libosmo-pfcp Packet Forwarding Control Protocol

lcsn1  
libosmo-csn1 Concrete Syntax Notation 1 codec

lio  
libosmocore IO Subsystem

debug  
Log debug messages and higher levels

info  
Log informational messages and higher levels

notice  
Log noticeable messages and higher levels

error  
Log error messages and higher levels

fatal  
Log only fatal messages

.LOGMESSAGE  
Arbitrary message to log on given category and log level

### 1.2.18 no logging level force-all

Command

```
no logging level force-all
```

Parameters

no

Negate a command or set its defaults

logging

Configure logging

level

Set the log level for a specified category

force-all

Release any globally forced log level set with 'logging level force-all <level>'

### 1.2.19 show alarms

#### Command

```
show alarms
```

#### Parameters

##### show

Show running system information

##### alarms

Show current logging configuration

### 1.2.20 show asciidoc counters

#### Command

```
show asciidoc counters
```

#### Parameters

##### show

Show running system information

##### asciidoc

Asciidoc generation

##### counters

Generate table of all registered counters

### 1.2.21 show history

#### Command

```
show history
```

#### Parameters

##### show

Show running system information

##### history

Display the session command history

### 1.2.22 show logging vty

#### Command

```
show logging vty
```

#### Parameters

##### show

Show running system information

##### logging

Show current logging configuration

##### vtty

Show current logging configuration for this vty

### 1.2.23 show online-help

#### Command

```
show online-help
```

#### Parameters

##### show

Show running system information

##### online-help

Online help

### 1.2.24 show pid

#### Command

```
show pid
```

#### Parameters

##### show

Show running system information

##### pid

Displays the process ID

### 1.2.25 show rate-counters [skip-zero]

#### Command

```
show rate-counters [skip-zero]
```

#### Parameters

##### show

Show running system information

##### rate-counters

Show all rate counters

##### [skip-zero]

Skip items with total count zero

### 1.2.26 show stats [skip-zero]

#### Command

```
show stats [skip-zero]
```

#### Parameters

##### show

Show running system information

##### stats

Show statistical values

##### [skip-zero]

Skip items with total count zero

### 1.2.27 show stats level (global|peer|subscriber) [skip-zero]

#### Command

```
show stats level (global|peer|subscriber) [skip-zero]
```

#### Parameters

##### show

Show running system information

##### stats

Show statistical values

---

level

Set the maximum group level

global

Show global groups only

peer

Show global and network peer related groups

subscriber

Show global, peer, and subscriber groups

[skip-zero]

Skip items with total count zero

### 1.2.28 show talloc-context (application|global|all) (full|brief|DEPTH)

Command

```
show talloc-context (application|global|all) (full|brief|DEPTH)
```

Parameters

show

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

global

Global context (OTC\_GLOBAL)

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

---

### 1.2.29 show talloc-context (application|global|all) (full|brief|DEPTH) filter REGEXP

#### Command

```
show talloc-context (application|global|all) (full|brief|DEPTH) filter REGEXP
```

#### Parameters

##### show

Show running system information

##### talloc-context

Show talloc memory hierarchy

##### application

Application's context

##### global

Global context (OTC\_GLOBAL)

##### all

All contexts, if NULL-context tracking is enabled

##### full

Display a full talloc memory hierarchy

##### brief

Display a brief talloc memory hierarchy

##### DEPTH

Specify required maximal depth value

##### filter

Filter chunks using regular expression

##### REGEXP

Regular expression

### 1.2.30 show talloc-context (application|global|all) (full|brief|DEPTH) tree ADDRESS

#### Command

```
show talloc-context (application|global|all) (full|brief|DEPTH) tree ADDRESS
```

#### Parameters

##### show

Show running system information

##### talloc-context

Show talloc memory hierarchy

application

Application's context

global

Global context (OTC\_GLOBAL)

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

tree

Display only a specific memory chunk

ADDRESS

Chunk address (e.g. 0xdeadbeef)

### 1.2.31 show uptime

Command

```
show uptime
```

Parameters

show

Show running system information

uptime

Displays how long the program has been running

### 1.2.32 show version

Command

```
show version
```

Parameters

show

Show running system information

version

Displays program version



### 1.2.33 terminal length <0-512>

#### Command

```
terminal length <0-512>
```

#### Parameters

##### terminal

Set terminal line parameters

##### length

Set number of lines on a screen

##### <0-512>

Number of lines on screen (0 for no pausing)

### 1.2.34 terminal no length

#### Command

```
terminal no length
```

#### Parameters

##### terminal

Set terminal line parameters

##### no

Negate a command or set its defaults

##### length

Set number of lines on a screen

### 1.2.35 who

#### Command

```
who
```

#### Parameters

##### who

Display who is on vty

---

## 1.3 enable

The enable node is a privileged node, allowing to make changes to the configuration and to access further commands like 'configure'. All commands seen on the view node are also available here.

### 1.3.1 configure [terminal]

Command

```
configure [terminal]
```

Parameters

configure

Configuration from vty interface

[terminal]

Configuration terminal

### 1.3.2 copy running-config startup-config

Command

```
copy running-config startup-config
```

Parameters

copy

Copy configuration

running-config

Copy running config to...

startup-config

Copy running config to startup config (same as write file)

### 1.3.3 disable

Command

```
disable
```

Parameters

disable

Turn off privileged mode command

### 1.3.4 logging color (0|1)

#### Command

```
logging color (0|1)
```

#### Parameters

##### logging

Configure logging

##### color

Configure color-printing for log messages

0

Don't use color for printing messages

1

Use color for printing messages

### 1.3.5 logging disable

#### Command

```
logging disable
```

#### Parameters

##### logging

Configure logging

##### disable

Disables logging to this vty

### 1.3.6 logging enable

This command is required to make logging commands available on the telnet VTY.

#### Command

```
logging enable
```

#### Parameters

##### logging

Configure logging

##### enable

Enables logging to this vty

---

### 1.3.7 logging filter all (0|1)

Disable/enable general log output on a given target. Typically, 'logging filter all 1' allows to see the usual log output on a given target. Setting to '0' can be useful when logging to the telnet VTY console: mute all log output to allow typing VTY commands on the telnet prompt without interference from log output; 'logging filter all 1' then re-enables logging in the same log output configuration as before. Some applications provide more specific filters, e.g. to log a given IMSI only. To employ such filters, set 'logging filter all 0' to disable general logging, and then enable a more specific filter instead.

#### Command

```
logging filter all (0|1)
```

#### Parameters

##### logging

Configure logging

##### filter

Filter log messages

##### all

Do you want to log all messages?

##### 0

Only print messages matched by other filters

##### 1

Bypass filter and print all messages

### 1.3.8 logging level (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|...

#### Command

```
logging level (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctrl| ↔
lgtp|lstats|lgsup|loap|lss7|lsccp|lsua|lm3ua|lmgcp|ljibuf|lrspro|lns|lbssgp|lndata ↔
|lnssignal|liuup|lpfcp|lcsn1|lio) (debug|info|notice|error|fatal)
```

#### Parameters

##### logging

Configure logging

##### level

Set the log level for a specified category

##### pcap

PCAP related functionality

##### client

Client related functionality

---

server  
    Server related functionality

vtv  
    VTY code

tls  
    TLS code

lglobal  
    Library-internal global log family

llapd  
    LAPD in libosmogsm

linp  
    A-bis Input Subsystem

lmux  
    A-bis B-Subchannel TRAU Frame Multiplex

lmi  
    A-bis Input Driver for Signalling

lmib  
    A-bis Input Driver for B-Channels (voice)

lsms  
    Layer3 Short Message Service (SMS)

lctrl  
    Control Interface

lgtp  
    GPRS GTP library

lstats  
    Statistics messages and logging

lgsup  
    Generic Subscriber Update Protocol

loap  
    Osmocom Authentication Protocol

lss7  
    libosmo-sigtran Signalling System 7

lscpp  
    libosmo-sigtran SCCP Implementation

lsua  
    libosmo-sigtran SCCP User Adaptation

lm3ua  
    libosmo-sigtran MTP3 User Adaptation

---

---

lmgcp  
libosmo-mgcp Media Gateway Control Protocol

ljibuf  
libosmo-netif Jitter Buffer

lrspro  
Remote SIM protocol

lns  
GPRS NS layer

lbssgp  
GPRS BSSGP layer

lndata  
GPRS NS layer data PDU

lnsignal  
GPRS NS layer signal PDU

liuup  
Iu UP layer

lpfcp  
libosmo-pfcp Packet Forwarding Control Protocol

lcsn1  
libosmo-csn1 Concrete Syntax Notation 1 codec

lio  
libosmocore IO Subsystem

debug  
Log debug messages and higher levels

info  
Log informational messages and higher levels

notice  
Log noticeable messages and higher levels

error  
Log error messages and higher levels

fatal  
Log only fatal messages

---

### 1.3.9 logging level force-all (debug|info|notice|error|fatal)

#### Command

```
logging level force-all (debug|info|notice|error|fatal)
```

#### Parameters

##### logging

Configure logging

##### level

Set the log level for a specified category

##### force-all

Globally force all logging categories to a specific level. This is released by the 'no logging level force-all' command. Note: any 'logging level <category> <level>' commands will have no visible effect after this, until the forced level is released.

##### debug

Log debug messages and higher levels

##### info

Log informational messages and higher levels

##### notice

Log noticeable messages and higher levels

##### error

Log error messages and higher levels

##### fatal

Log only fatal messages

### 1.3.10 logging level set-all (debug|info|notice|error|fatal)

#### Command

```
logging level set-all (debug|info|notice|error|fatal)
```

#### Parameters

##### logging

Configure logging

##### level

Set the log level for a specified category

##### set-all

Once-off set all categories to the given log level. There is no single command to take back these changes -- each category is set to the given level, period.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

### 1.3.11 logging print category (0|1)

Command

```
logging print category (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

category

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem name

### 1.3.12 logging print category-hex (0|1)

Command

```
logging print category-hex (0|1)
```

Parameters

logging

Configure logging



print

Log output settings

category-hex

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem nr in hex ('<000b>')

### 1.3.13 logging print extended-timestamp (0|1)

Command

```
logging print extended-timestamp (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

extended-timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp with YYYYMMDDhhmmssnnn

### 1.3.14 logging print file (0|1|basename) [last]

Command

```
logging print file (0|1|basename) [last]
```

Parameters

logging

Configure logging

print

Log output settings

file

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the source file and line

basename

Prefix each log message with the source file's basename (strip leading paths) and line

[last]

Log source file info at the end of a log line. If omitted, log source file info just before the log text.

### 1.3.15 logging print level (0|1)

Command

```
logging print level (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

level

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the log level name

### 1.3.16 logging print thread-id (0|1)

Command

```
logging print thread-id (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

thread-id

Configure log message logging Thread ID

0

Don't prefix each log message

1

Prefix each log message with current Thread ID

### 1.3.17 logging set-log-mask MASK

Command

```
logging set-log-mask MASK
```

Parameters

logging

Configure logging

set-log-mask

Set the logmask of this logging target

MASK

List of logging categories to log, e.g. 'abc:mno:xyz'. Available log categories depend on the specific application, refer to the 'logging level' command. Optionally add individual log levels like 'abc,1:mno,3:xyz,5', where the level numbers are LOGL\_DEBUG=1 LOGL\_INFO=3 LOGL\_NOTICE=5 LOGL\_ERROR=7 LOGL\_FATAL=8

### 1.3.18 logging timestamp (0|1)

Command

```
logging timestamp (0|1)
```

Parameters

logging

Configure logging

timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp

### 1.3.19 logp (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctrl|lgtp...

#### Command

```
logp (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctrl|lgtp| ←  
lstats|lgsup|loap|lss7|lscpp|lsua|lm3ua|lmgcp|ljibuf|lrspro|lns|lbssgp|lndata| ←  
lnsignal|liuup|lpfcp|lcsn1|lio) (debug|info|notice|error|fatal) .LOGMESSAGE
```

#### Parameters

##### logp

Print a message on all log outputs; useful for placing markers in test logs

##### pcap

PCAP related functionality

##### client

Client related functionality

##### server

Server related functionality

##### vty

VTY code

##### tls

TLS code

##### lglobal

Library-internal global log family

##### llapd

LAPD in libosmogsm

##### linp

A-bis Input Subsystem

##### lmux

A-bis B-Subchannel TRAU Frame Multiplex

##### lmi

A-bis Input Driver for Signalling

##### lmib

A-bis Input Driver for B-Channels (voice)

##### lsms

Layer3 Short Message Service (SMS)

##### lctrl

Control Interface

##### lgtp

GPRS GTP library

---

lstats  
Statistics messages and logging

lgsup  
Generic Subscriber Update Protocol

loap  
Osmocom Authentication Protocol

lss7  
libosmo-sigtran Signalling System 7

lscpp  
libosmo-sigtran SCCP Implementation

lsua  
libosmo-sigtran SCCP User Adaptation

lm3ua  
libosmo-sigtran MTP3 User Adaptation

lmgcp  
libosmo-mgcp Media Gateway Control Protocol

ljibuf  
libosmo-netif Jitter Buffer

lrspro  
Remote SIM protocol

lns  
GPRS NS layer

lbssgp  
GPRS BSSGP layer

lnsdata  
GPRS NS layer data PDU

lnsignal  
GPRS NS layer signal PDU

liuup  
Iu UP layer

lpfcp  
libosmo-pfcp Packet Forwarding Control Protocol

lcsn1  
libosmo-csn1 Concrete Syntax Notation 1 codec

lio  
libosmocore IO Subsystem

debug  
Log debug messages and higher levels

---

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

.LOGMESSAGE

Arbitrary message to log on given category and log level

### 1.3.20 no logging level force-all

Command

```
no logging level force-all
```

Parameters

no

Negate a command or set its defaults

logging

Configure logging

level

Set the log level for a specified category

force-all

Release any globally forced log level set with 'logging level force-all <level>'

### 1.3.21 show alarms

Command

```
show alarms
```

Parameters

show

Show running system information

alarms

Show current logging configuration

### 1.3.22 show asciidoc counters

#### Command

```
show asciidoc counters
```

#### Parameters

##### show

Show running system information

##### asciidoc

Asciidoc generation

##### counters

Generate table of all registered counters

### 1.3.23 show history

#### Command

```
show history
```

#### Parameters

##### show

Show running system information

##### history

Display the session command history

### 1.3.24 show logging vty

#### Command

```
show logging vty
```

#### Parameters

##### show

Show running system information

##### logging

Show current logging configuration

##### vty

Show current logging configuration for this vty

---

### 1.3.25 show online-help

#### Command

```
show online-help
```

#### Parameters

show

Show running system information

online-help

Online help

### 1.3.26 show rate-counters [skip-zero]

#### Command

```
show rate-counters [skip-zero]
```

#### Parameters

show

Show running system information

rate-counters

Show all rate counters

[skip-zero]

Skip items with total count zero

### 1.3.27 show startup-config

#### Command

```
show startup-config
```

#### Parameters

show

Show running system information

startup-config

Contentes of startup configuration



### 1.3.28 show stats [skip-zero]

#### Command

```
show stats [skip-zero]
```

#### Parameters

##### show

Show running system information

##### stats

Show statistical values

##### [skip-zero]

Skip items with total count zero

### 1.3.29 show stats level (global|peer|subscriber) [skip-zero]

#### Command

```
show stats level (global|peer|subscriber) [skip-zero]
```

#### Parameters

##### show

Show running system information

##### stats

Show statistical values

##### level

Set the maximum group level

##### global

Show global groups only

##### peer

Show global and network peer related groups

##### subscriber

Show global, peer, and subscriber groups

##### [skip-zero]

Skip items with total count zero

---

### 1.3.30 show talloc-context (application|global|all) (full|brief|DEPTH)

#### Command

```
show talloc-context (application|global|all) (full|brief|DEPTH)
```

#### Parameters

##### show

Show running system information

##### talloc-context

Show talloc memory hierarchy

##### application

Application's context

##### global

Global context (OTC\_GLOBAL)

##### all

All contexts, if NULL-context tracking is enabled

##### full

Display a full talloc memory hierarchy

##### brief

Display a brief talloc memory hierarchy

##### DEPTH

Specify required maximal depth value

### 1.3.31 show talloc-context (application|global|all) (full|brief|DEPTH) filter REGEXP

#### Command

```
show talloc-context (application|global|all) (full|brief|DEPTH) filter REGEXP
```

#### Parameters

##### show

Show running system information

##### talloc-context

Show talloc memory hierarchy

##### application

Application's context

##### global

Global context (OTC\_GLOBAL)

---

- all
  - All contexts, if NULL-context tracking is enabled
- full
  - Display a full talloc memory hierarchy
- brief
  - Display a brief talloc memory hierarchy
- DEPTH
  - Specify required maximal depth value
- filter
  - Filter chunks using regular expression
- REGEXP
  - Regular expression

### 1.3.32 show talloc-context (application|global|all) (full|brief|DEPTH) tree ADDRESS

#### Command

```
show talloc-context (application|global|all) (full|brief|DEPTH) tree ADDRESS
```

#### Parameters

- show
  - Show running system information
- talloc-context
  - Show talloc memory hierarchy
- application
  - Application's context
- global
  - Global context (OTC\_GLOBAL)
- all
  - All contexts, if NULL-context tracking is enabled
- full
  - Display a full talloc memory hierarchy
- brief
  - Display a brief talloc memory hierarchy
- DEPTH
  - Specify required maximal depth value
- tree
  - Display only a specific memory chunk
- ADDRESS
  - Chunk address (e.g. 0xdeadbeef)

### 1.3.33 show version

#### Command

```
show version
```

#### Parameters

##### show

Show running system information

##### version

Displays program version

### 1.3.34 shutdown

#### Command

```
shutdown
```

#### Parameters

##### shutdown

Request a shutdown of the program

### 1.3.35 stats report

#### Command

```
stats report
```

#### Parameters

##### stats

Stats related commands

##### report

Manurally trigger reporting of stats

### 1.3.36 stats reset

#### Command

```
stats reset
```

#### Parameters

##### stats

Stats related commands

##### reset

Reset all rate counter stats

### 1.3.37 terminal length <0-512>

#### Command

```
terminal length <0-512>
```

#### Parameters

##### terminal

Set terminal line parameters

##### length

Set number of lines on a screen

##### <0-512>

Number of lines on screen (0 for no pausing)

### 1.3.38 terminal monitor

#### Command

```
terminal monitor
```

#### Parameters

##### terminal

Set terminal line parameters

##### monitor

Copy debug output to the current terminal line

### 1.3.39 terminal no length

#### Command

```
terminal no length
```

#### Parameters

##### terminal

Set terminal line parameters

##### no

Negate a command or set its defaults

##### length

Set number of lines on a screen

---

### 1.3.40 terminal no monitor

#### Command

```
terminal no monitor
```

#### Parameters

##### terminal

Set terminal line parameters

##### no

Negate a command or set its defaults

##### monitor

Copy debug output to the current terminal line

### 1.3.41 who

#### Command

```
who
```

#### Parameters

##### who

Display who is on vty

## 1.4 config

The config node is the root for all configuration commands, which are identical to the config file format. Changes made on the telnet VTY can be made persistent with the 'write file' command.

### 1.4.1 banner motd default

#### Command

```
banner motd default
```

#### Parameters

##### banner

Set banner string

##### motd

Strings for motd

##### default

Default string

---

## 1.4.2 banner motd file [FILE]

### Command

```
banner motd file [FILE]
```

### Parameters

#### banner

Set banner

#### motd

Banner for motd

#### file

Banner from a file

#### [FILE]

Filename

## 1.4.3 enable password (8|) WORD

### Command

```
enable password (8|) WORD
```

### Parameters

#### enable

Modify enable password parameters

#### password

Assign the privileged level password

#### 8

Specifies a HIDDEN password will follow

#### dummy string

#### WORD

The HIDDEN 'enable' password string

### 1.4.4 enable password LINE

#### Command

```
enable password LINE
```

#### Parameters

##### enable

Modify enable password parameters

##### password

Assign the privileged level password

##### LINE

The UNENCRYPTED (cleartext) 'enable' password

### 1.4.5 hostname WORD

#### Command

```
hostname WORD
```

#### Parameters

##### hostname

Set system's network name

##### WORD

This system's network name

### 1.4.6 line vty

#### Command

```
line vty
```

#### Parameters

##### line

Configure a terminal line

##### vty

Virtual terminal

---



### 1.4.7 log alarms <2-32700>

#### Command

```
log alarms <2-32700>
```

#### Parameters

log

Configure logging sub-system

alarms

Logging alarms to osmo\_strrb

<2-32700>

Maximum number of messages to log

### 1.4.8 log file FILENAME [blocking-io]

#### Command

```
log file FILENAME [blocking-io]
```

#### Parameters

log

Configure logging sub-system

file

Logging to text file

FILENAME

Filename

[blocking-io]

Use blocking, synchronous I/O

### 1.4.9 log gsmtap [HOSTNAME]

#### Command

```
log gsmtap [HOSTNAME]
```

#### Parameters

log

Configure logging sub-system

gsmtap

Logging via GSMTAP

[HOSTNAME]

Host name to send the GSMTAP logging to (UDP port 4729)

---

### 1.4.10 log stderr [blocking-io]

#### Command

```
log stderr [blocking-io]
```

#### Parameters

log

Configure logging sub-system

stderr

Logging via STDERR of the process

[blocking-io]

Use blocking, synchronous I/O

### 1.4.11 log syslog (authpriv|cron|daemon|ftp|lpr|mail|news|user|uucp)

#### Command

```
log syslog (authpriv|cron|daemon|ftp|lpr|mail|news|user|uucp)
```

#### Parameters

log

Configure logging sub-system

syslog

Logging via syslog

authpriv

Security/authorization messages facility

cron

Clock daemon (cron/at) facility

daemon

General system daemon facility

ftp

Ftp daemon facility

lpr

Line printer facility

mail

Mail facility

news

News facility

user

Generic facility

uucp

UUCP facility

### 1.4.12 log syslog local <0-7>

#### Command

```
log syslog local <0-7>
```

#### Parameters

log

Configure logging sub-system

syslog

Logging via syslog

local

Syslog LOCAL facility

<0-7>

Local facility number

### 1.4.13 log systemd-journal [raw]

#### Command

```
log systemd-journal [raw]
```

#### Parameters

log

Configure logging sub-system

systemd-journal

Logging to systemd-journal

[raw]

Offload rendering of the meta information (location, category) to systemd

### 1.4.14 no banner motd

#### Command

```
no banner motd
```

#### Parameters

no

Negate a command or set its defaults

banner

Set banner string

motd

Strings for motd

### 1.4.15 no enable password

#### Command

```
no enable password
```

#### Parameters

no

Negate a command or set its defaults

enable

Modify enable password parameters

password

Assign the privileged level password

### 1.4.16 no hostname [HOSTNAME]

#### Command

```
no hostname [HOSTNAME]
```

#### Parameters

no

Negate a command or set its defaults

hostname

Reset system's network name

[HOSTNAME]

Host name of this router

### 1.4.17 no log alarms

#### Command

```
no log alarms
```

#### Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

alarms

Logging alarms to osmo\_strrb

### 1.4.18 no log file FILENAME

#### Command

```
no log file FILENAME
```

#### Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

file

Logging to text file

FILENAME

Filename

### 1.4.19 no log gsmtap [HOSTNAME]

#### Command

```
no log gsmtap [HOSTNAME]
```

#### Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

gsmtap

Logging via GSMTAP

[HOSTNAME]

Host name to send the GSMTAP logging to (UDP port 4729)

### 1.4.20 no log stderr

#### Command

```
no log stderr
```

#### Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

stderr

Logging via STDERR of the process

### 1.4.21 no log syslog

#### Command

```
no log syslog
```

#### Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

syslog

Logging via syslog

### 1.4.22 no log systemd-journal

#### Command

```
no log systemd-journal
```

#### Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

systemd-journal

Logging to systemd-journal

### 1.4.23 no service advanced-vty

#### Command

```
no service advanced-vty
```

#### Parameters

no

Negate a command or set its defaults

service

Set up miscellaneous service

advanced-vty

Enable advanced mode vty interface

---

### 1.4.24 no service terminal-length [<0-512>]

#### Command

```
no service terminal-length [<0-512>]
```

#### Parameters

no

Negate a command or set its defaults

service

Set up miscellaneous service

terminal-length

System wide terminal length configuration

[<0-512>]

Number of lines of VTY (0 means no line control)

### 1.4.25 no stats reporter log [NAME]

#### Command

```
no stats reporter log [NAME]
```

#### Parameters

no

Negate a command or set its defaults

stats

Configure stats sub-system

reporter

Configure a stats reporter

log

Report to the logger

[NAME]

Name of the reporter

### 1.4.26 no stats reporter statsd [NAME]

#### Command

```
no stats reporter statsd [NAME]
```

#### Parameters

no

Negate a command or set its defaults

stats

Configure stats sub-system

reporter

Configure a stats reporter

statsd

Report to a STATSD server

[NAME]

Name of the reporter

### 1.4.27 password (8|) WORD

#### Command

```
password (8|) WORD
```

#### Parameters

password

Assign the terminal connection password

8

Specifies a HIDDEN password will follow

dummy string

WORD

The HIDDEN line password string

### 1.4.28 password LINE

#### Command

```
password LINE
```

#### Parameters

password

Assign the terminal connection password

LINE

The UNENCRYPTED (cleartext) line password



### 1.4.29 server

#### Command

```
server
```

#### Parameters

server

Enter the server configuration

### 1.4.30 service advanced-vty

#### Command

```
service advanced-vty
```

#### Parameters

service

Set up miscellaneous service

advanced-vty

Enable advanced mode vty interface

### 1.4.31 service terminal-length <0-512>

#### Command

```
service terminal-length <0-512>
```

#### Parameters

service

Set up miscellaneous service

terminal-length

System wide terminal length configuration

<0-512>

Number of lines of VTY (0 means no line control)

---

### 1.4.32 show history

#### Command

```
show history
```

#### Parameters

##### show

Show running system information

##### history

Display the session command history

### 1.4.33 stats interval <0-65535>

#### Command

```
stats interval <0-65535>
```

#### Parameters

##### stats

Configure stats sub-system

##### interval

Set the reporting interval

##### <0-65535>

Interval in seconds (0 disables the reporting interval)

### 1.4.34 stats reporter log [NAME]

#### Command

```
stats reporter log [NAME]
```

#### Parameters

##### stats

Configure stats sub-system

##### reporter

Configure a stats reporter

##### log

Report to the logger

##### [NAME]

Name of the reporter

---

### 1.4.35 stats reporter statsd [NAME]

#### Command

```
stats reporter statsd [NAME]
```

#### Parameters

stats

Configure stats sub-system

reporter

Configure a stats reporter

statsd

Report to a STATSD server

[NAME]

Name of the reporter

### 1.4.36 stats-tcp batch-size <1-65535>

#### Command

```
stats-tcp batch-size <1-65535>
```

#### Parameters

stats-tcp

Configure stats sub-system

batch-size

Set the number of tcp sockets that are processed per stats polling interval

<1-65535>

Number of sockets per interval

### 1.4.37 stats-tcp interval <0-65535>

#### Command

```
stats-tcp interval <0-65535>
```

#### Parameters

stats-tcp

Configure stats sub-system

interval

Set the tcp socket stats polling interval

<0-65535>

Interval in seconds (0 disables the polling interval)

---

## 1.5 config-log

The log node is commonly available in all Osmocom programs and allows configuring logging to stderr and/or log files, including logging category and level filtering as well as output formatting options. Note that the 'logging enable' command is required to make logging commands available on the telnet VTY.

### 1.5.1 logging color (0|1)

#### Command

```
logging color (0|1)
```

#### Parameters

##### logging

Configure logging

##### color

Configure color-printing for log messages

0

Don't use color for printing messages

1

Use color for printing messages

### 1.5.2 logging filter all (0|1)

Disable/enable general log output on a given target. Typically, 'logging filter all 1' allows to see the usual log output on a given target. Setting to '0' can be useful when logging to the telnet VTY console: mute all log output to allow typing VTY commands on the telnet prompt without interference from log output; 'logging filter all 1' then re-enables logging in the same log output configuration as before. Some applications provide more specific filters, e.g. to log a given IMSI only. To employ such filters, set 'logging filter all 0' to disable general logging, and then enable a more specific filter instead.

#### Command

```
logging filter all (0|1)
```

#### Parameters

##### logging

Configure logging

##### filter

Filter log messages

all

Do you want to log all messages?

0

Only print messages matched by other filters

1

Bypass filter and print all messages

### 1.5.3 logging level (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|...

#### Command

```
logging level (pcap|client|server|vty|tls|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctrl| ↔
lgtp|lstats|lgsup|loap|lss7|lscpp|lsua|lm3ua|lmgcp|ljibuf|lrspro|lns|lbssgp|lndata ↔
|lnssignal|liuup|lpfcp|lcsn1|lio) (debug|info|notice|error|fatal)
```

#### Parameters

##### logging

Configure logging

##### level

Set the log level for a specified category

##### pcap

PCAP related functionality

##### client

Client related functionality

##### server

Server related functionality

##### vty

VTY code

##### tls

TLS code

##### lglobal

Library-internal global log family

##### llapd

LAPD in libosmogsm

##### linp

A-bis Input Subsystem

##### lmux

A-bis B-Subchannel TRAU Frame Multiplex

##### lmi

A-bis Input Driver for Signalling

##### lmib

A-bis Input Driver for B-Channels (voice)

##### lsms

Layer3 Short Message Service (SMS)

##### lctrl

Control Interface

---

lgtp  
GPRS GTP library

lstats  
Statistics messages and logging

lgsup  
Generic Subscriber Update Protocol

loap  
Osmocom Authentication Protocol

lss7  
libosmo-sigtran Signalling System 7

lsccp  
libosmo-sigtran SCCP Implementation

lsua  
libosmo-sigtran SCCP User Adaptation

lm3ua  
libosmo-sigtran MTP3 User Adaptation

lmgcp  
libosmo-mgcp Media Gateway Control Protocol

ljibuf  
libosmo-netif Jitter Buffer

lrspro  
Remote SIM protocol

lns  
GPRS NS layer

lbssgp  
GPRS BSSGP layer

lnsdata  
GPRS NS layer data PDU

lnsignal  
GPRS NS layer signal PDU

liuup  
Iu UP layer

lpfcp  
libosmo-pfcp Packet Forwarding Control Protocol

lcsn1  
libosmo-csn1 Concrete Syntax Notation 1 codec

lio  
libosmocore IO Subsystem

---

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

### 1.5.4 logging level force-all (debug|info|notice|error|fatal)

Command

```
logging level force-all (debug|info|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

force-all

Globally force all logging categories to a specific level. This is released by the 'no logging level force-all' command. Note: any 'logging level <category> <level>' commands will have no visible effect after this, until the forced level is released.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

### 1.5.5 logging level set-all (debug|info|notice|error|fatal)

#### Command

```
logging level set-all (debug|info|notice|error|fatal)
```

#### Parameters

##### logging

Configure logging

##### level

Set the log level for a specified category

##### set-all

Once-off set all categories to the given log level. There is no single command to take back these changes -- each category is set to the given level, period.

##### debug

Log debug messages and higher levels

##### info

Log informational messages and higher levels

##### notice

Log noticeable messages and higher levels

##### error

Log error messages and higher levels

##### fatal

Log only fatal messages

### 1.5.6 logging print category (0|1)

#### Command

```
logging print category (0|1)
```

#### Parameters

##### logging

Configure logging

##### print

Log output settings

##### category

Configure log message

##### 0

Don't prefix each log message

##### 1

Prefix each log message with category/subsystem name

---



## 1.5.7 logging print category-hex (0|1)

### Command

```
logging print category-hex (0|1)
```

### Parameters

#### logging

Configure logging

#### print

Log output settings

#### category-hex

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem nr in hex ('<000b>')

## 1.5.8 logging print extended-timestamp (0|1)

### Command

```
logging print extended-timestamp (0|1)
```

### Parameters

#### logging

Configure logging

#### print

Log output settings

#### extended-timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp with YYYYMMDDhhmmssnnn

### 1.5.9 logging print file (0|1|basename) [last]

#### Command

```
logging print file (0|1|basename) [last]
```

#### Parameters

##### logging

Configure logging

##### print

Log output settings

##### file

Configure log message

##### 0

Don't prefix each log message

##### 1

Prefix each log message with the source file and line

##### basename

Prefix each log message with the source file's basename (strip leading paths) and line

##### [last]

Log source file info at the end of a log line. If omitted, log source file info just before the log text.

### 1.5.10 logging print level (0|1)

#### Command

```
logging print level (0|1)
```

#### Parameters

##### logging

Configure logging

##### print

Log output settings

##### level

Configure log message

##### 0

Don't prefix each log message

##### 1

Prefix each log message with the log level name

### 1.5.11 logging print thread-id (0|1)

#### Command

```
logging print thread-id (0|1)
```

#### Parameters

##### logging

Configure logging

##### print

Log output settings

##### thread-id

Configure log message logging Thread ID

0

Don't prefix each log message

1

Prefix each log message with current Thread ID

### 1.5.12 logging timestamp (0|1)

#### Command

```
logging timestamp (0|1)
```

#### Parameters

##### logging

Configure logging

##### timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp

### 1.5.13 no logging level force-all

#### Command

```
no logging level force-all
```

#### Parameters

no

Negate a command or set its defaults

logging

Configure logging

level

Set the log level for a specified category

force-all

Release any globally forced log level set with 'logging level force-all <level>'

## 1.6 config-stats

### 1.6.1 disable

#### Command

```
disable
```

#### Parameters

disable

Disable the reporter

### 1.6.2 enable

#### Command

```
enable
```

#### Parameters

enable

Enable the reporter

---

### 1.6.3 flush-period <0-65535>

#### Command

```
flush-period <0-65535>
```

#### Parameters

##### flush-period

Configure stats sub-system

##### <0-65535>

Send all stats even if they have not changed (i.e. force the flush) every N-th reporting interval. Set to 0 to disable regular flush (default).

### 1.6.4 level (global|peer|subscriber)

#### Command

```
level (global|peer|subscriber)
```

#### Parameters

##### level

Set the maximum group level

##### global

Report global groups only

##### peer

Report global and network peer related groups

##### subscriber

Report global, peer, and subscriber groups

### 1.6.5 local-ip ADDR

#### Command

```
local-ip ADDR
```

#### Parameters

##### local-ip

Set the IP address to which we bind locally

##### ADDR

IP Address

---

## 1.6.6 mtu <100-65535>

### Command

```
mtu <100-65535>
```

### Parameters

mtu

Set the maximum packet size

<100-65535>

Size in byte

## 1.6.7 no local-ip

### Command

```
no local-ip
```

### Parameters

no

Negate a command or set its defaults

local-ip

Set the IP address to which we bind locally

## 1.6.8 no mtu

### Command

```
no mtu
```

### Parameters

no

Negate a command or set its defaults

mtu

Set the maximum packet size

---

### 1.6.9 no prefix

#### Command

```
no prefix
```

#### Parameters

no

Negate a command or set its defaults

prefix

Set the item name prefix

### 1.6.10 prefix PREFIX

#### Command

```
prefix PREFIX
```

#### Parameters

prefix

Set the item name prefix

PREFIX

The prefix string

### 1.6.11 remote-ip ADDR

#### Command

```
remote-ip ADDR
```

#### Parameters

remote-ip

Set the remote IP address to which we connect

ADDR

IP Address

---

## 1.6.12 remote-port <1-65535>

### Command

```
remote-port <1-65535>
```

### Parameters

#### remote-port

Set the remote port to which we connect

#### <1-65535>

Remote port number

## 1.7 config-line

### 1.7.1 bind A.B.C.D [<0-65535>]

### Command

```
bind A.B.C.D [<0-65535>]
```

### Parameters

#### bind

Accept VTY telnet connections on local interface

#### A.B.C.D

Local interface IP address (default: 127.0.0.1)

#### [<0-65535>]

Local TCP port number

### 1.7.2 login

### Command

```
login
```

### Parameters

#### login

Enable password checking



### 1.7.3 no login

#### Command

```
no login
```

#### Parameters

no

Negate a command or set its defaults

login

Enable password checking

## 1.8 server

### 1.8.1 base-path PATH

#### Command

```
base-path PATH
```

#### Parameters

base-path

Base path for log files

PATH

Path

### 1.8.2 client NAME A.B.C.D [(store|no-store)] [tls]

#### Command

```
client NAME A.B.C.D [(store|no-store)] [tls]
```

#### Parameters

client

Client

NAME

Remote name used in filenames

A.B.C.D

IP of the remote

[store]

Store traffic

[no-store]

Do not store traffic

[tls]

Use Transport Level Security

---

### 1.8.3 completed-path PATH

#### Command

```
completed-path PATH
```

#### Parameters

##### completed-path

Base path for completed (already closed, rotated) log files

##### PATH

Path

### 1.8.4 disable tls

#### Command

```
disable tls
```

#### Parameters

##### disable

Disable

##### tls

Transport Layer Security

### 1.8.5 enable tls

#### Command

```
enable tls
```

#### Parameters

##### enable

Enable

##### tls

Transport Layer Security

---

### 1.8.6 file-permission-mask MODE

#### Command

```
file-permission-mask MODE
```

#### Parameters

##### file-permission-mask

Permission mask to use when creating pcap files

##### MODE

The file permission mask, in octal format (default: 0440)

### 1.8.7 max-file-size NR

#### Command

```
max-file-size NR
```

#### Parameters

##### max-file-size

Maximum file size for a trace

##### NR

Filesize in bytes

### 1.8.8 max-snaplen <1-262144>

#### Command

```
max-snaplen <1-262144>
```

#### Parameters

##### max-snaplen

Maximum pcap snapshot length

##### <1-262144>

Bytes

---

### 1.8.9 no client NAME

#### Command

```
no client NAME
```

#### Parameters

no

Negate a command or set its defaults

client

Client

NAME

The name

### 1.8.10 no completed-path

#### Command

```
no completed-path
```

#### Parameters

no

Negate a command or set its defaults

completed-path

Base path for completed (already closed, rotated) log files. Completed files won't be moved.

### 1.8.11 no max-file-size

#### Command

```
no max-file-size
```

#### Parameters

no

Negate a command or set its defaults

max-file-size

Maximum file size for a trace

### 1.8.12 no rotate-localtime

#### Command

```
no rotate-localtime
```

#### Parameters

no

Negate a command or set its defaults

rotate-localtime

Rotate pcap based on local time clock-wall frequency

### 1.8.13 no tls allow-auth anonymous

#### Command

```
no tls allow-auth anonymous
```

#### Parameters

no

Negate a command or set its defaults

tls

Transport Layer Security

allow-auth

allow authentication

anonymous

for anonymous

### 1.8.14 no tls allow-auth x509

#### Command

```
no tls allow-auth x509
```

#### Parameters

no

Negate a command or set its defaults

tls

Transport Layer Security

allow-auth

allow authentication

x509

for certificates

### 1.8.15 no tls capath

#### Command

```
no tls capath
```

#### Parameters

no

Negate a command or set its defaults

tls

Transport Layer Security

capath

Trusted root certificates

### 1.8.16 no tls crlfile

#### Command

```
no tls crlfile
```

#### Parameters

no

Negate a command or set its defaults

tls

Transport Layer Security

crlfile

CRL file

### 1.8.17 no tls priority

#### Command

```
no tls priority
```

#### Parameters

no

Negate a command or set its defaults

tls

Transport Layer Security

priority

Priority string for GNUtls

---

### 1.8.18 no tls server-cert

#### Command

```
no tls server-cert
```

#### Parameters

no

Negate a command or set its defaults

tls

Transport Layer Security

server-cert

Server certificate

### 1.8.19 no tls server-key

#### Command

```
no tls server-key
```

#### Parameters

no

Negate a command or set its defaults

tls

Transport Layer Security

server-key

Server private key

### 1.8.20 no zeromq-publisher

#### Command

```
no zeromq-publisher
```

#### Parameters

no

Negate a command or set its defaults

zeromq-publisher

Disable zeromq-publishing

### 1.8.21 rotate-localtime (second|minute|hour|day|month|year)

#### Command

```
rotate-localtime (second|minute|hour|day|month|year)
```

#### Parameters

##### rotate-localtime

Rotate pcap based on local time clock-wall periodicity

##### second

Rotate every Second

##### minute

Rotate every Minute

##### hour

Rotate every Hour

##### day

Rotate every Day

##### month

(null)

##### year

(null)

### 1.8.22 rotate-localtime (second|minute|hour|day|month|year) mod <1-4294967295>

#### Command

```
rotate-localtime (second|minute|hour|day|month|year) mod <1-4294967295>
```

#### Parameters

##### rotate-localtime

Rotate pcap based on local time clock-wall periodicity

##### second

Rotate every Second

##### minute

Rotate every Minute

##### hour

Rotate every Hour

##### day

Rotate every Day



month

Rotate every Nth second/minute/hour/day/month/yearNth second/minute/hour/day/month/year

year

(null)

mod

(null)

<1-4294967295>

(null)

### 1.8.23 server ip A.B.C.D

Command

```
server ip A.B.C.D
```

Parameters

server

Server settings

ip

Listen

A.B.C.D

IP Address

### 1.8.24 server port <1-65535>

Command

```
server port <1-65535>
```

Parameters

server

Server settings

port

Port

<1-65535>

Port Number

### 1.8.25 `tls allow-auth anonymous`

#### Command

```
tls allow-auth anonymous
```

#### Parameters

`tls`

Transport Layer Security

`allow-auth`

allow authentication

`anonymous`

for anonymous

### 1.8.26 `tls allow-auth x509`

#### Command

```
tls allow-auth x509
```

#### Parameters

`tls`

Transport Layer Security

`allow-auth`

allow authentication

`x509`

for certificates

### 1.8.27 `tls capath .PATH`

#### Command

```
tls capath .PATH
```

#### Parameters

`tls`

Transport Layer Security

`capath`

Trusted root certificates

`.PATH`

Filename

---

### 1.8.28 `tls crlfile .PATH`

#### Command

```
tls crlfile .PATH
```

#### Parameters

`tls`

Transport Layer Security

`crlfile`

CRL file

`.PATH`

Filename

### 1.8.29 `tls dh generate`

#### Command

```
tls dh generate
```

#### Parameters

`tls`

Transport Layer Security

`dh`

Diffie-Hellman Key Exchange

`generate`

Generate prime

### 1.8.30 `tls dh pkcs .FILE`

#### Command

```
tls dh pkcs .FILE
```

#### Parameters

`tls`

Transport Layer Security

`dh`

Diffie-Hellman Key Exchange

`pkcs`

PKCS3

`.FILE`

Filename

### 1.8.31 `tls log-level <0-255>`

#### Command

```
tls log-level <0-255>
```

#### Parameters

`tls`

Transport Layer Security

`log-level`

Log-level

`<0-255>`

GNUtls debug level

### 1.8.32 `tls priority STR`

#### Command

```
tls priority STR
```

#### Parameters

`tls`

Transport Layer Security

`priority`

Priority string for GNUtls

`STR`

Priority string

### 1.8.33 `tls server-cert .PATH`

#### Command

```
tls server-cert .PATH
```

#### Parameters

`tls`

Transport Layer Security

`server-cert`

Server certificate

`.PATH`

Filename

---

### 1.8.34 `tls server-key .PATH`

#### Command

```
tls server-key .PATH
```

#### Parameters

`tls`

Transport Layer Security

`server-key`

Server private key

`.PATH`

Filename

### 1.8.35 `zeromq-publisher (A.B.C.D|*) <1-65535>`

#### Command

```
zeromq-publisher (A.B.C.D|*) <1-65535>
```

#### Parameters

`zeromq-publisher`

Enable publishing data to ZeroMQ

`A.B.C.D`

Bind to IPv4 address

`*`

Bind to wildcard

`<1-65535>`

Bind to port

---